



WESTFALIA 2 BOW ROOF RACK FITTING INSTRUCTIONS

- 1 Brackets face inwards. If Splitscreen bus, you will be supplied two different width cross bows. (A) The narrower one fits at the front of your bus. (Bay window are the same width)

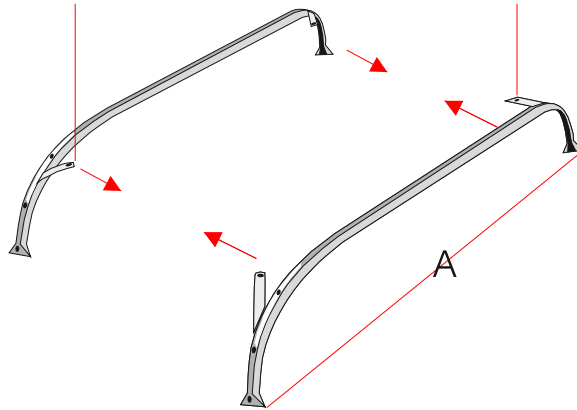


- 2 2 x 5 hole slats go on outside of rack

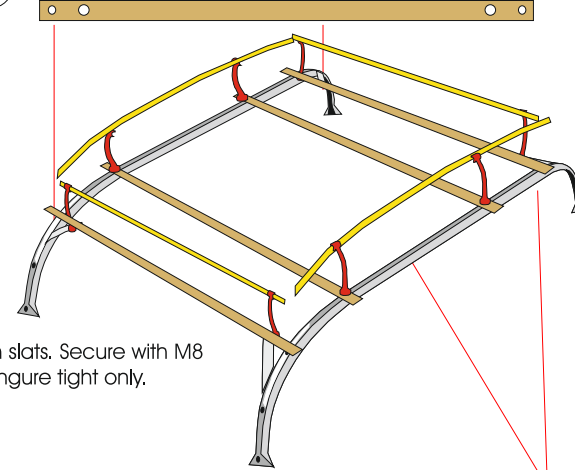


Fit outer and forth slats. Secure with M8 Caphead bolts finger tight only.

2 x 3 large hole slats go in forth position inwards

- 3 Fit remaining slats but do not tighten all nuts

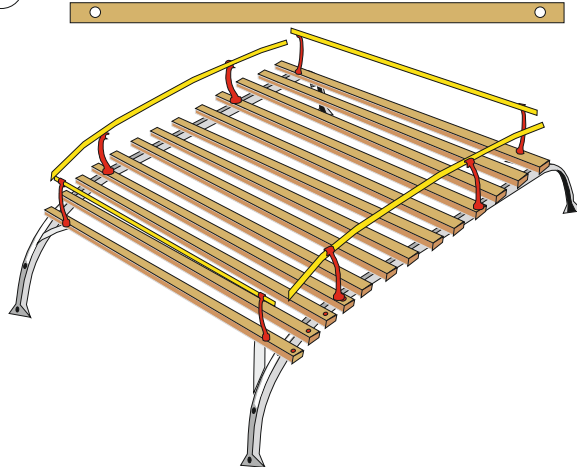

- 4

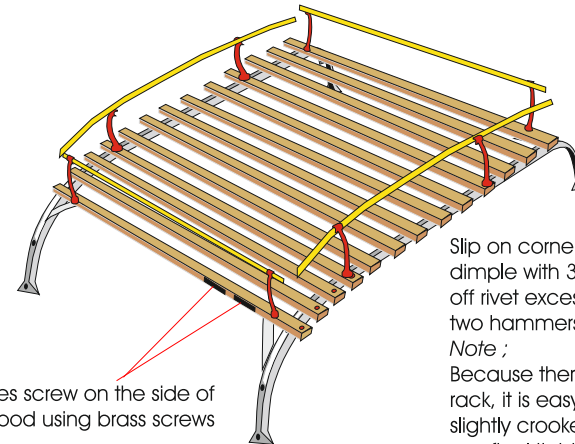

Badges screw on the side of the wood using brass screws

Slip on corners with dimples upwards. Drill dimple with 3mm drill and slip in rivets. Snip off rivet excess leaving 3mm underneath. Use two hammers and dolly rivet.

Note ;

Because there are only two bows on your rack, it is easy for the rack to be assembled slightly crooked. We therefore recommend you final tighten the fastenings , or at least some of them, on the bus to be sure of a perfect fit.