


WESTFALIA 4 BOW ROOF RACK FITTING INSTRUCTIONS

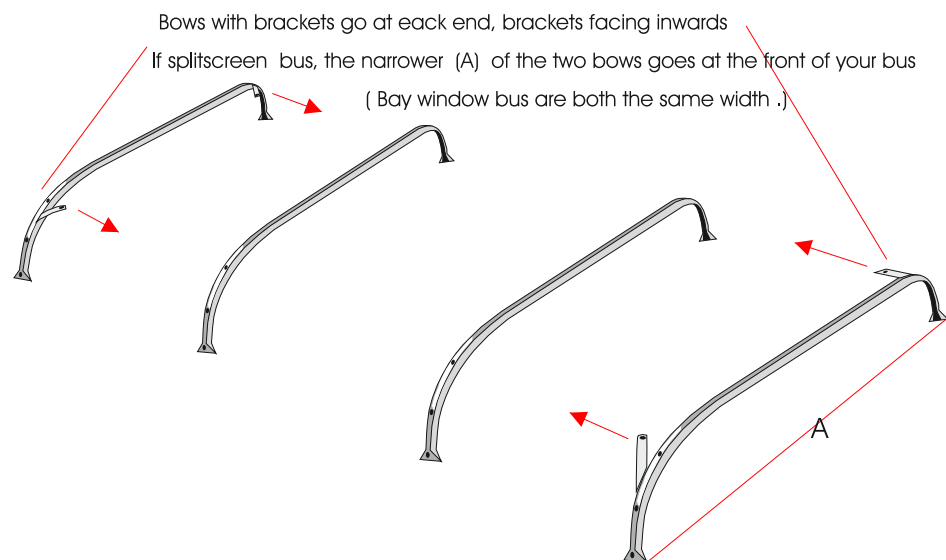

Use M6 coach bolts fit
in outer four corners.
DO NOT FULLY TIGHTEN

